



Palm Zire 21 Keypad Replacement

How to replace the Keypad on a Zire 21


Written By: Jeremy Craft



INTRODUCTION




Use this guide to replace the keypad on a Palm Zire 21.

Step 1 — Keypad

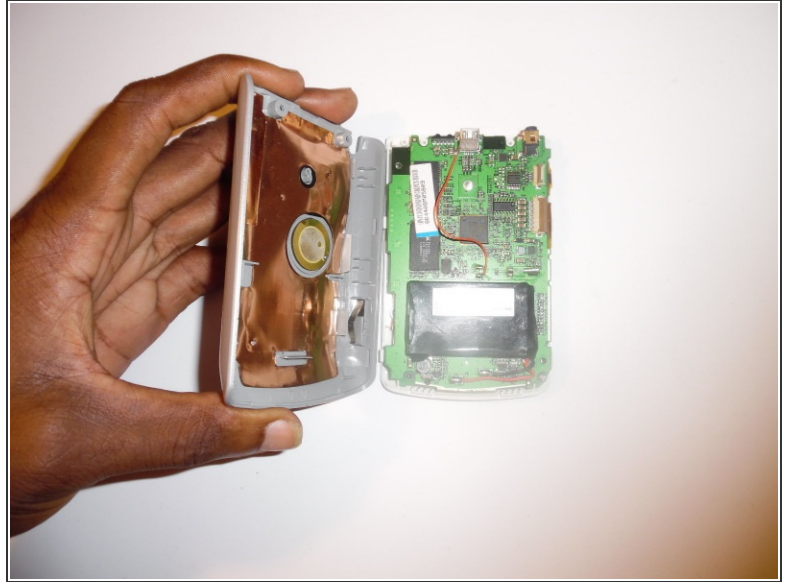



- Remove the two 0.8mm screws located on the back of the device.

Step 2

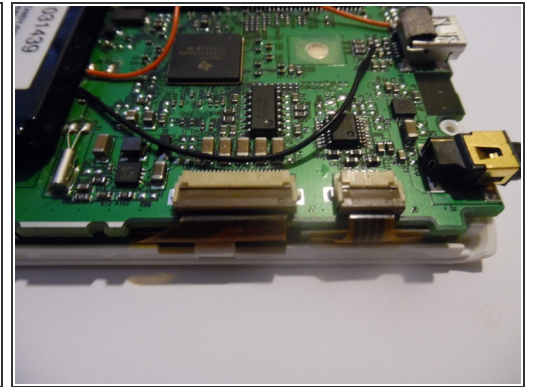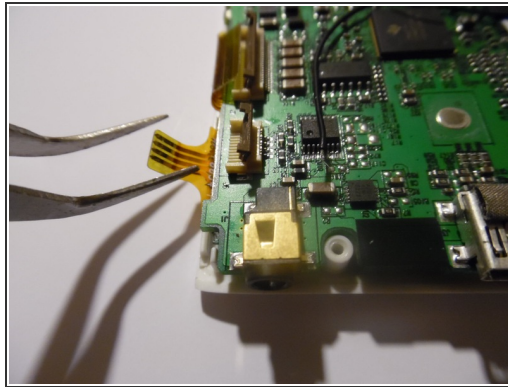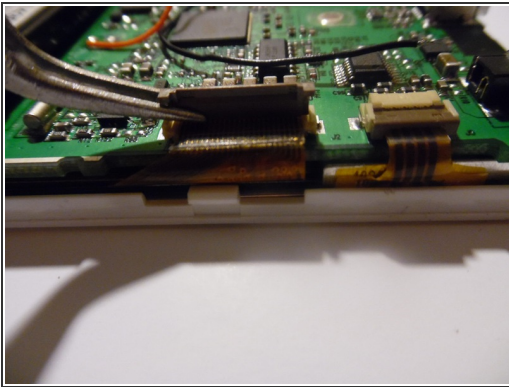


- Using tweezers, or something similar flip up the tab, releasing the wires located under the flap.

Step 3

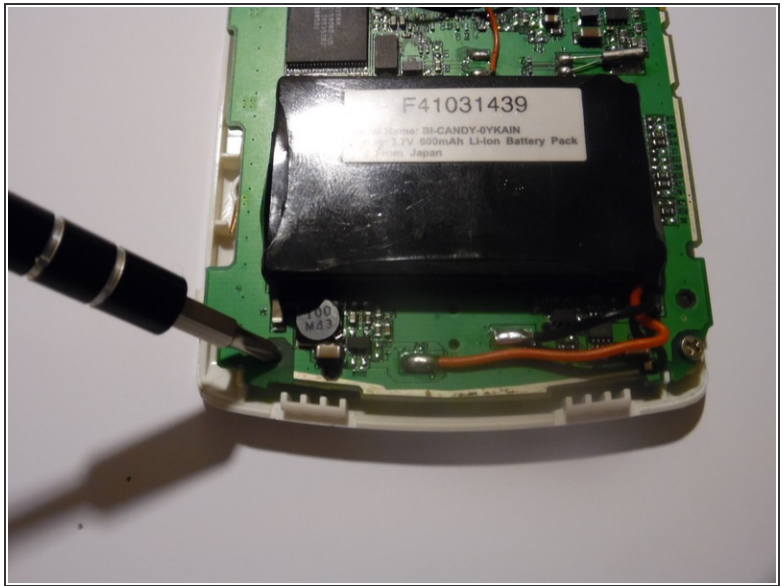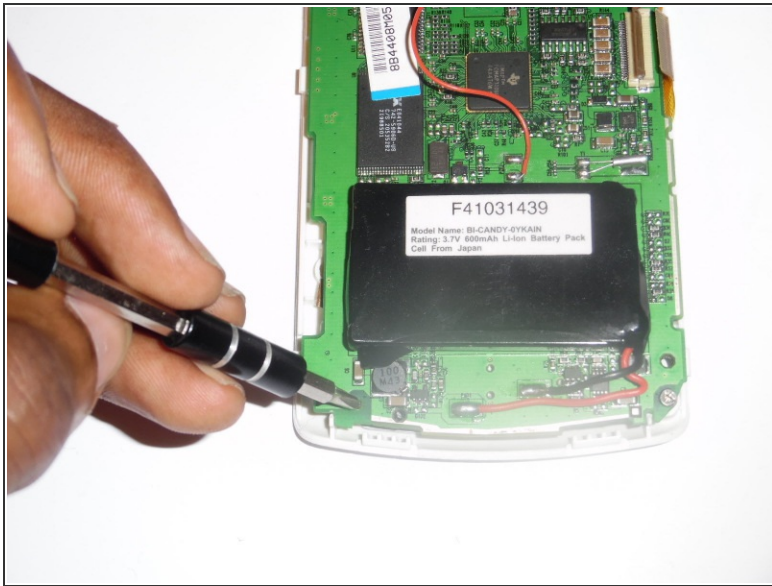

- Remove the two screws located at the bottom of the mothership, using a Philips head screwdriver.

Step 4

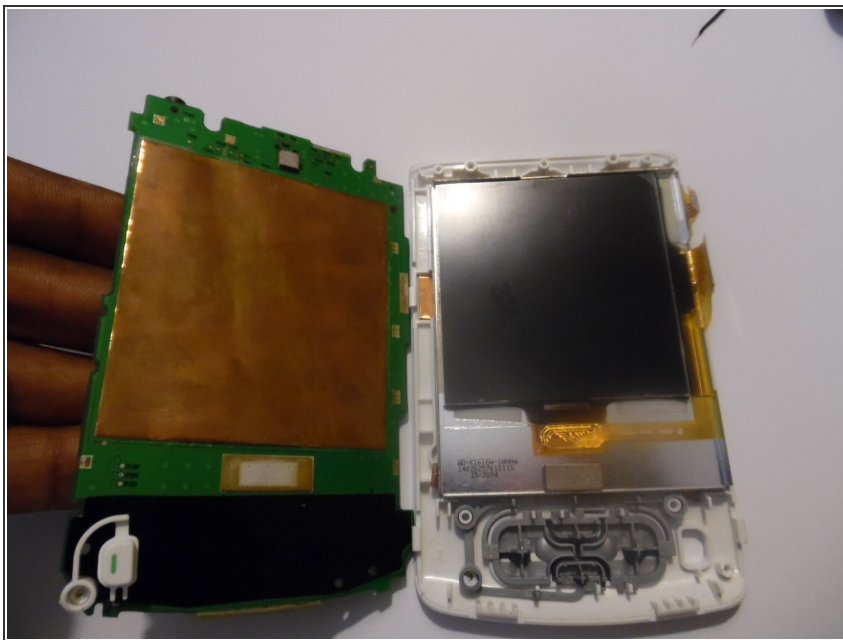

- Carefully remove the mother board by lifting up, exposing the keypad.

Step 5



- Using tweezers, or something similar remove the keypad from the device and replace with a new one.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 09:01:46 PM.